

Mighty Line Exterior Application



Figure 1



Figure 2



Figure 3

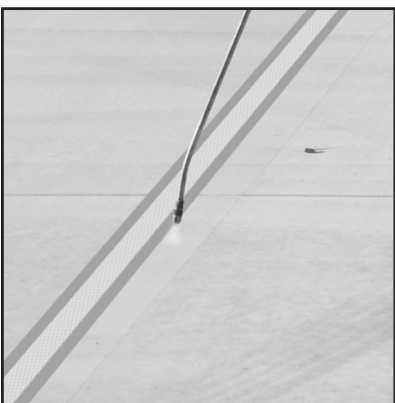


Figure 4

Application process:

- 1) **Power wash concrete or outdoor surface** with AQUA-SOLVE®, or another mild detergent where tape is going to be used. (See Figure 1).
- 2) **Rinse.**
- 3) **Apply Sealer with a Sprayer.** Apply a light mist over the area where the Mighty Line Tape will be applied. Let the area dry for an hour or so, depending on climate and conditions. (See Figure 2).

For Mighty Line Tape we recommend V-Seal 102. V-Seal 102 is a water soluble penetrating sealer. Before applying the sealer, the concrete can be damp, but should not have any puddles on it.*

We suggest sealing the whole area that is to be striped, but, you could seal a 2 foot path where the Mighty Line Tape is to be applied.

Think of concrete as a big sponge – it absorbs water every time it gets wet. Vseal 102 prohibits water from penetrating, and at the same time allows the concrete to breathe. This keeps the adhesive on the underside of the Reflective Dock Tape from absorbing moisture.

If you notice a small white/gray residue on the concrete, the sealer has been applied a little thick in that area. Do not worry, it will wear off with time. Or, you can spray it off with a pressure sprayer.

- 4) **Apply Tape.** After the Sealer and the concrete are dry, apply the Mighty Line tape. (See Figure 3).

Note: Mighty Line Tape will adhere better, and the sealer will dry quicker on warm sunny days.

If there are any deep cracks, saw joints, or groove marks, we suggest cutting the Mighty Line Tape. Filling any deep cracks with concrete filler before tape application is recommended.

If you leave a space for water to affect the tape, the tape will likely breakdown in that area.

- 5) **Spray VSeal 102 on top of the Mighty Line Tape EDGES** after the tape is down on the surface. This prevents seepage to the adhesive. (See Figure 4).

